


The Cozy User Guide for Residents

Temperature Setting & LED Light Bar


Each Cozy allows you to control the temperature in that room. To change the temperature, simply use the two buttons on the front of the Cozy.

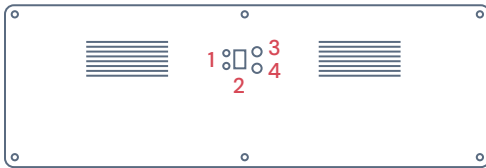

1. Buttons
2. LED Light Bar
3. Status Light
4. Temperature Sensor (Do not block!)

The LED Light Bar indicates temperature set point
The higher the bar, the warmer the set temperature.

Temperature Setting (Fahrenheit)	Fan Speed
84°	High
77°	Low
76°	Low
75°	Low
74°	Low
73°	Low
72°	Low
71°	Low
70°	Low
69°	Low
68°	Low

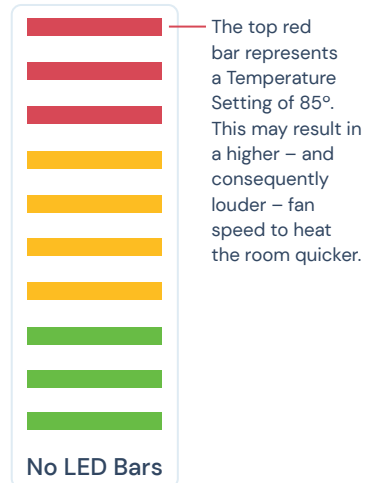

The Cozy has a temperature sensor on its front plate (see diagram above). If this sensor is blocked (i.e., there is furniture directly in front of it) it will not be able to measure the temperature as accurately as possible. Please be sure to leave the area clear in front of the Cozy.